




step 4

The water is ready to DRINK. Water should be kept in the bottle, or poured into a glass and consumed immediately to avoid contamination.

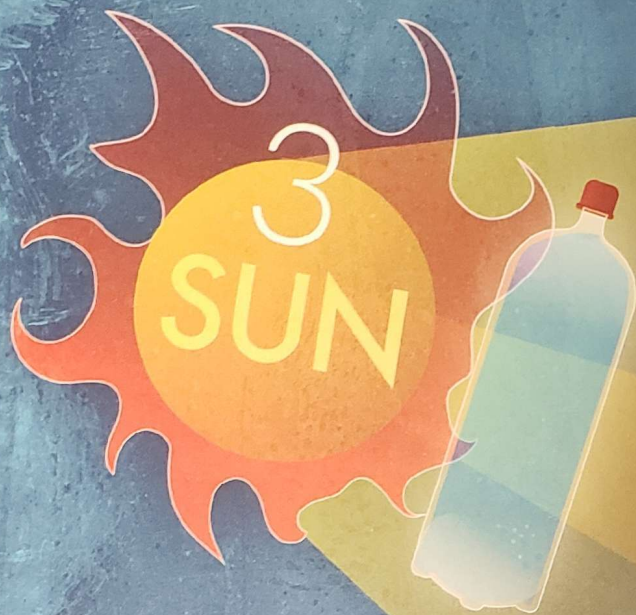

step 3

Place the bottle in the SUN. Place on slanted surface for 6 hours. During cloudy, overcast skies, bottles should be in sunlight for 2 days. (This method does not work in rain.)

SUSTAINABLE  
DEVELOPMENT

# SODIS

SOLAR  
DISINFECTANT



step 2

FILL the bottle  
Clear water is necessary. Turbidity can be determined by placing your hand behind the bottle. (If you can see your fingers, the water is clear.)



step 1

CLEAN the bottle.  
Clear bottles are necessary,  
PET bottles are recommended.

